

Installation Instructions:

1. Remove protective backing from template.
2. Position the template on the duct and press firmly.
3. Cut along the edges of the template, following the edges as closely as possible and remove the “cut-out”.
4. Insert the air extractor control rod through the tension lock on the face of the register.
5. Position the register in the opening, making certain that the gasket material remains in place.
6. Check that the register has been installed correctly in relation to the air flow.
7. Secure the register with the screws provided.